

# D900

Android IP Video Phone

WWW.FANVIL.COM

## Android IP Video Phone D900 Quick Installation Guide



VoIPon [www.voipon.co.uk](http://www.voipon.co.uk) [sales@voipon.co.uk](mailto:sales@voipon.co.uk) Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299

# Fanvil

Smart VoIP

1

Fanvil

# Instruction



**D900**

Android IP Video Phone

Overview

## Included Accessories



Android IP Video  
Phone D900



Handset



Power adaptor



Handset cord




Quick Installation Guide



Ethernet Cable

## 2 The Appearance of Product


Front view and keypad function:

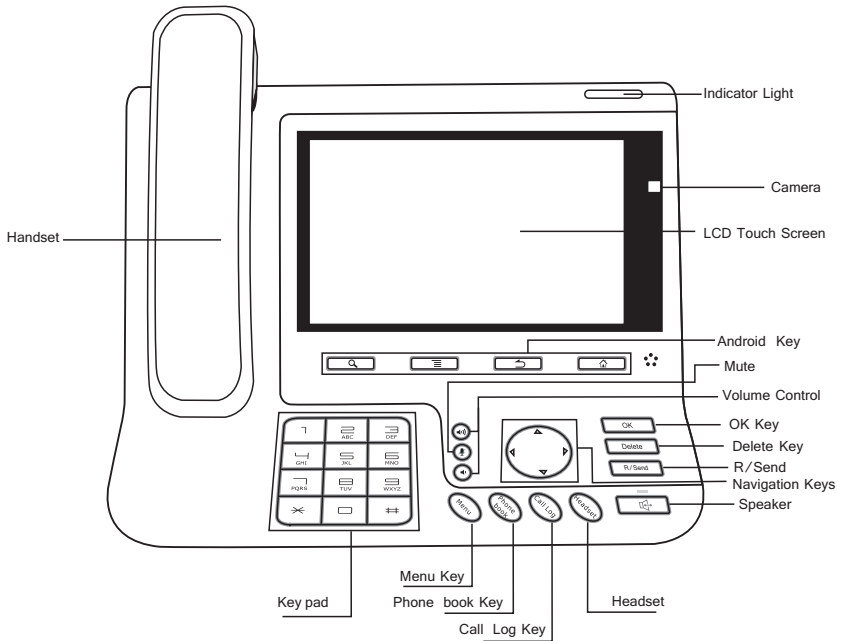

# 3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

## Wide Area Network/Internet

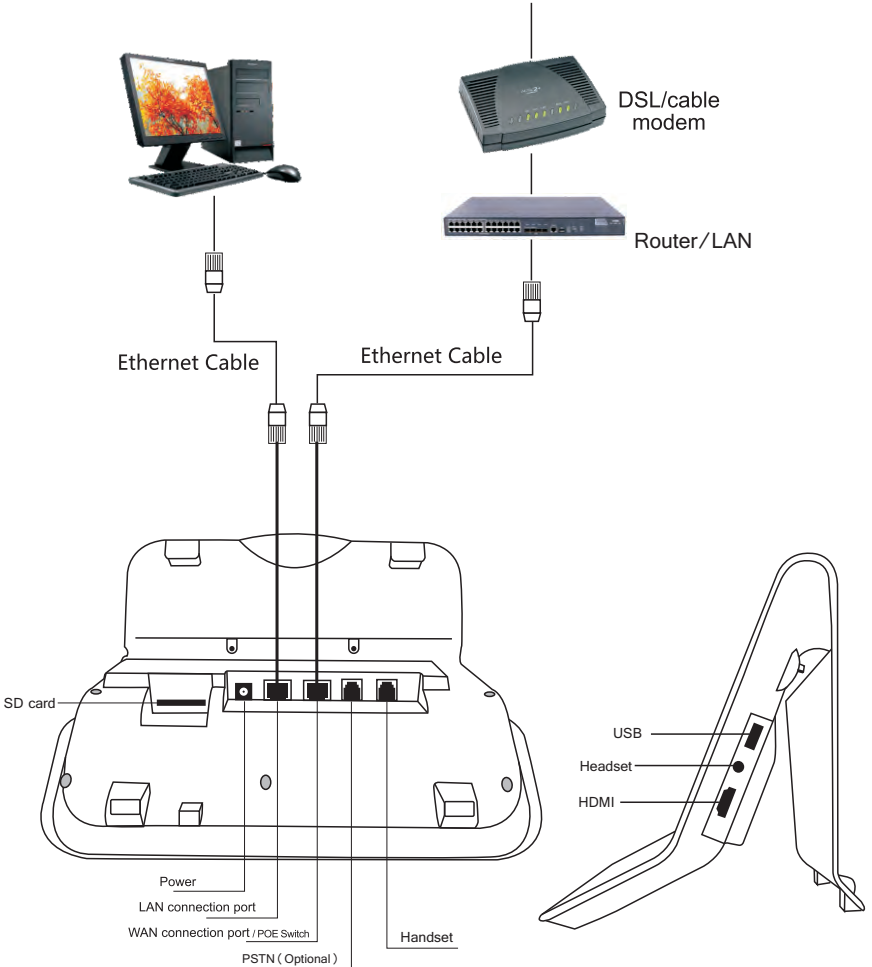


# 4 Configuration

## Configuring via Web

Drag status bar, and you would get the phone's network IP parameters.

Open web browser and input the IP with , such as `http://192.168.1.1/` in the address bar. You would get ready to enter web interface and set up.

The default username and password are admin/admin.

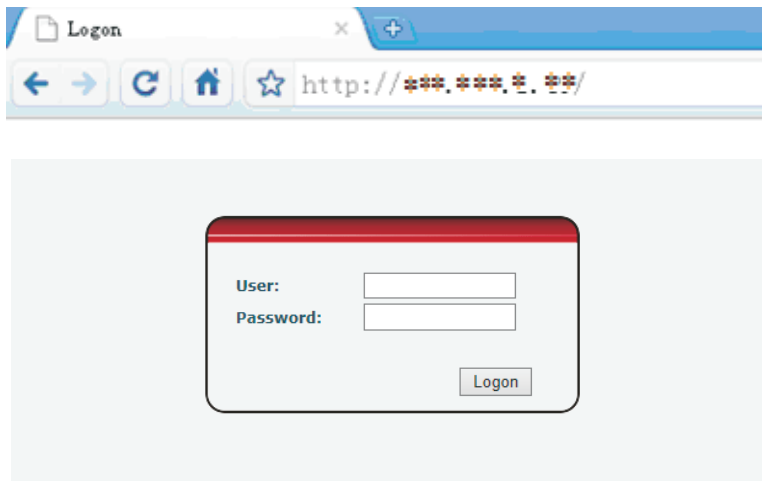

# 5 Configuration

## VoIP Settings

Choose VoIP-SIP get voip account

Get VoIP account from VoIP service provider. Then configure SIP server address, server port, account name, password, and phone number. Finally, enable register and apply.

The screenshot shows the Fanvil D900 web interface. The top navigation bar includes 'SIP' and 'STUN' tabs. A left sidebar contains menu items: BASIC, NETWORK, VOIP (selected), PHONE, MAINTENANCE, SECURITY, and LOGOUT. The main content area is titled 'SIP Line' with a dropdown menu set to 'SIP 1'. Below this, there are two sections: 'Basic Settings >>' and 'Advanced SIP Settings >>'. The 'Basic Settings' section includes fields for Status (Unapplied), Server Address, Server Port (5060), Authentication User, Authentication Password, SIP User, Display Name, and Enable Registration (checkbox). It also includes fields for Domain Realm, Proxy Server Address, Proxy Server Port, Proxy User, Proxy Password, Backup Server Address, Backup Server Port (5060), and Server Name. An 'Apply' button is located at the bottom of the 'Basic Settings' section. The footer of the page shows the URL 'http://192.168.2.240/voipet.htm' and the version 'Version: 10.236.1346.74'.

## Configuring via lcd menu

### Network Settings

Enter lcd menu, and choose and press “settings”.

Choose and press “WAN”. Enter Ethernet configuration and select DHCP or Static IP based your network access mode. If you use xDSL, press “PPPoE Set” for set up user name/password. And enable “connect when boot complete”.

### VoIP Settings

Enter lcd menu, and choose and press “Settings”.


Choose and press “Account”, and then you will enter Account1. Set up SIP server address, server port, account name, password and phone number. You can press more to change some advanced settings and then back to basic setting. Enable register and save.

## 6 Make a Phone Call

Phone support 2 media calls: Voice IP call and Video IP call.

### Make a call

→ Call via dialing keypad

1. Select the SIP line you want to use (SIP1, SIP2, SIP3, SIP4)
2. Dial the number via keypad or touch screen directly. If you dial the wrong number, just press  to delete it. Or press and hold it for delete all of them.
3. After dialing, press voice or video key.


### Answer a call

When you receive a call which is in contact, you could see the contact's name, small pic, number.

### Call Services

→ Video Call

There are 3 ways to make/answer video calls:

1. If a incoming call is a Video call, you may see voice and video soft key. Press video, you may answer it with video call.
2. During voice talking, press  to request to start video, if the other party answers, you may start video call with voice.
3. If there is video request, you may press "answer" to accept it, or "reject" to refuse.

### Hold/Resume Call

During talking, press "Hold" to hold the current call. And there would be indication on the screen. If you need to resume call, just press "resume".

### Transfer

There are 3 ways to make transfer:

1. During talking, press "transfer", and then dial the 3rd number with pressing "send". After the called party answers, press "transfer".
2. During talking, there is incoming call. Press "voice" to answer it. Then press "transfer" to let 2 parties talk to each other.
3. During talking, press "transfer" and enter the 3rd number. Then press "transfer", the 1st call would be transferred to the 3rd number for calling.

### 3 Way Conference

If there are 2 calls call waiting, press "conference" and choose the number you want to make conference. Then it would be 3 way conference status. If you want to close conference, press "split" to end it and resume call waiting.

