

PIKA WARP Pager 15/30SZ Quick Start Guide



The following items are included in the PIKA WARP Pager package. If any parts are missing, please contact your distributor.

1. Quick Start Guide (this document)
2. WARP Pager unit



3. Universal power supply (includes country specific AC power cord)



Before you begin:

Ensure that you have the following items:

1. Non-VLAN tagged port on the LAN switch
2. Standard Ethernet cable
3. Optional: Zip tie
4. Optional: audio cable (1/8" stereo/mono plug)
5. Optional: two Pan head screws for wall mounting

Ensure that the system administrator has set up the WARP Pager configuration at the administration center.

Hardware Connections

- Locate the LAN switch associated with the Hosted PBX service and the IP Phones in the paging group.
- Connect the WARP Pager to any available non-VLAN tagged port with a standard Ethernet cable.
- If required, plug the overhead speaker into the line out port circled below.



Insert the power cord into the unit. Optionally, use a zip tie to secure the cord.



System Startup

The WARP Pager startup sequence takes approximately two minutes. It is ready to use when the LCD shows the WARP Pager title screen.

LCD

The LCD has four screens:

- WARP Pager title screen
- IP address screen
- SIP Server registration status
 - The screen should show **STATUS REGISTRATION=YES**
- Error codes screen.
 - The screen should show **ERRORS: None.** If not, contact your system administrator for a list of error codes.

Use the toggle button beside the LCD to switch between screens.



Wall Mounting

The unit can be stacked or wall mounted. Use the wall mounting template (located at www.pikatechnologies.com/pagerdocs) to position the screws on the wall. The screw heads must protrude 5/16" (80 mm) from the wall.

