


V-310 E1/T1 PCI Quickstart

Features

- Single Compact Flash port
- Single E1/T1 port for connection to the telephone network
- Single Foreign Exchange Station (FXS) port for connecting a phone or fax machine
- Hardware based G.168 echo cancellation chip up to 128 ms tail length
- PCI 2.2 compliant Ethernet interface
- 10/100 Mbps auto MDIX Ethernet port
- Per channel fax/modem G.164 pr G.165 2100 Hz phase reversal tone disable
- ITU-T G.165, G.168 (2000 and 2002) compliant

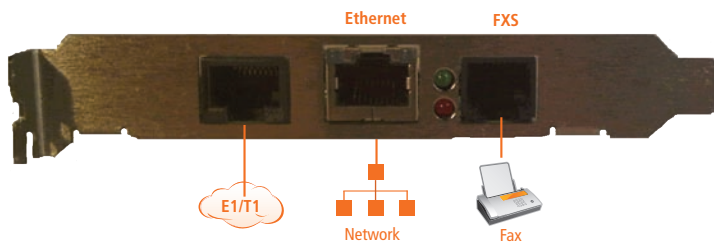

Contents of Box

- V-310 PCI Card
- Two RJ-45 Cat5e Ethernet Cables (orange)

Installation Steps



Ensure the power is off on the computer before inserting the card into the machine.

1. Install the PCI card into the machine:

- Insert card into the desired slot and screw the PCI bracket into the computer frame to ensure a solid fit
- When the PCI card is securely fastened, turn on the computer

NOTE: When the card is booting, the LED will flash from GREEN to RED with a short delay. When the board has successfully booted, the GREEN LED light will be solid.

2. Connect RJ-45 Ethernet cable provided (orange) to the Ethernet port on the PCI bracket:

- The Ethernet cable may be connected to a hub / switch or directly to a laptop / PC. The following is the default configuration for this port:

IP Address: 192.168.1.2

Speed: 10/100 Auto

3. Connect to the browser based configurator by opening the browser to the IP address. The following is the default connection credentials:

Username: admin

Password: mysecret

Support

To ensure your PBX is working, try the following:

- Check the LEDs on the PCI bracket, the GREEN LED light is solid
- Plug an analog telephone into the FXS port – is there a dial tone?
- At the dial tone, press 6001 and you will hear the operator's voice

These steps do not require user configuration. If you are unable to complete them, please contact Positron Telecommunication Systems.

Compact Flash

Sandisk Compact Flash is currently the only supported media



Think Inside the Box



Ethernet
192.168.1.2 (static)



To PCI Bus

Ethernet (optional - requires driver)

The default IP address of the card is 192.168.1.2 – the Ethernet interface on the bracket is auto speed detect and auto cable cross over. For configuration you may connect directly to the Ethernet interface or through a switch. No special cable is required.

Drivers

Windows XP/2000 and Linux source code are available on the CD along with installation instructions.

IMPORTANT: If you want to connect to the PCI card from the Host PC, you need to ensure the IP address is configured on the same segment as the PCI card. For example, if the default IP address of the card is 192.168.1.2, then a suggested IP address for the Host PC driver is 192.168.1.10.

LED Functionality


The LED on the PCI bracket provides state / diagnostic information. The table below describes each state:

Event	LED
Card is booting	GREEN to RED blinking
Operating system loading	Only GREEN blinking
System fully loaded and operational	GREEN solid
Hardware failure	RED solid

Factory Reset

In the event that a configuration does not allow connectivity to the system, a user may perform a factory reset that will put all the IP addresses and passwords back to the default settings. Instructions: Push and hold the reset button for approximately 20 seconds.

NOTE: When you push and hold the reset button, the LED light will be GREEN solid. When factory reset is complete, the GREEN and RED will be solid and the button can then be released.

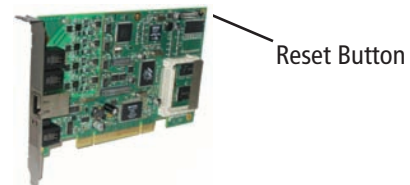

Positron Telecom • 5101 Buchan Street, Suite 200, Montreal, Quebec, Canada H4P 2R9 • Tel: (514)-345-2220 • Email: info@positrontelecom.com • www.positrontelecom.com

Document Code: 44-00031-02